

STAND ALONE FEVER SCANNER

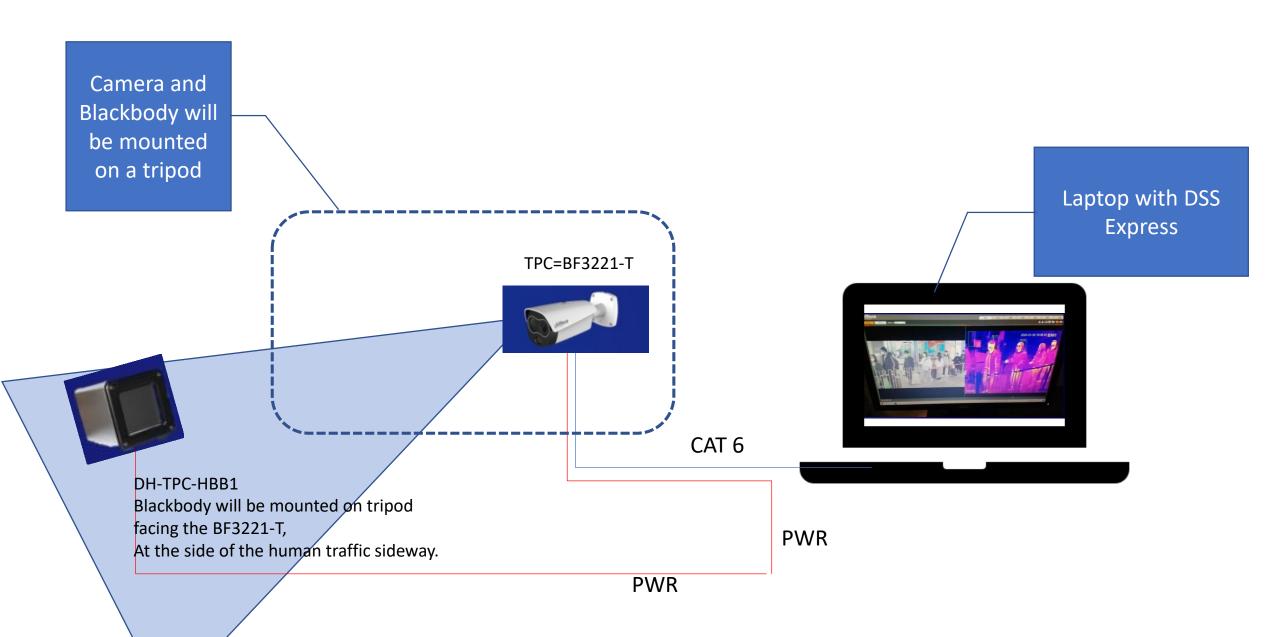


Deploy the thermal camera facing the human traffic direction,

DH-TPC-HBB1
Blackbody will be mounted on tripod facing the BF3221-T,
At the side of the human traffic sideway.

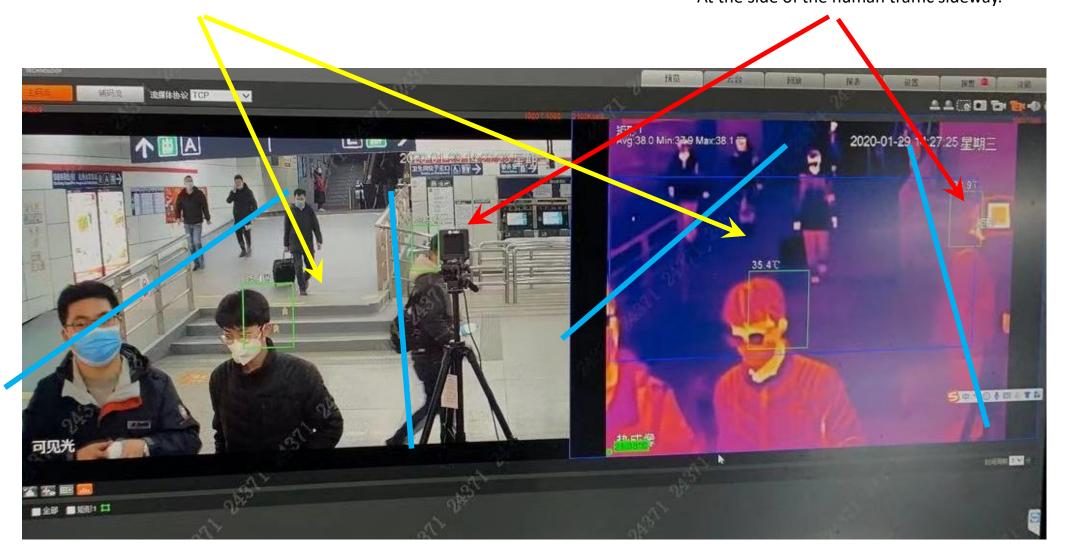

Deploy the thermal camera facing the human traffic direction,

DH-TPC-HBB1
Blackbody will be mounted on tripod facing the BF3221-T,
At the side of the human traffic sideway.

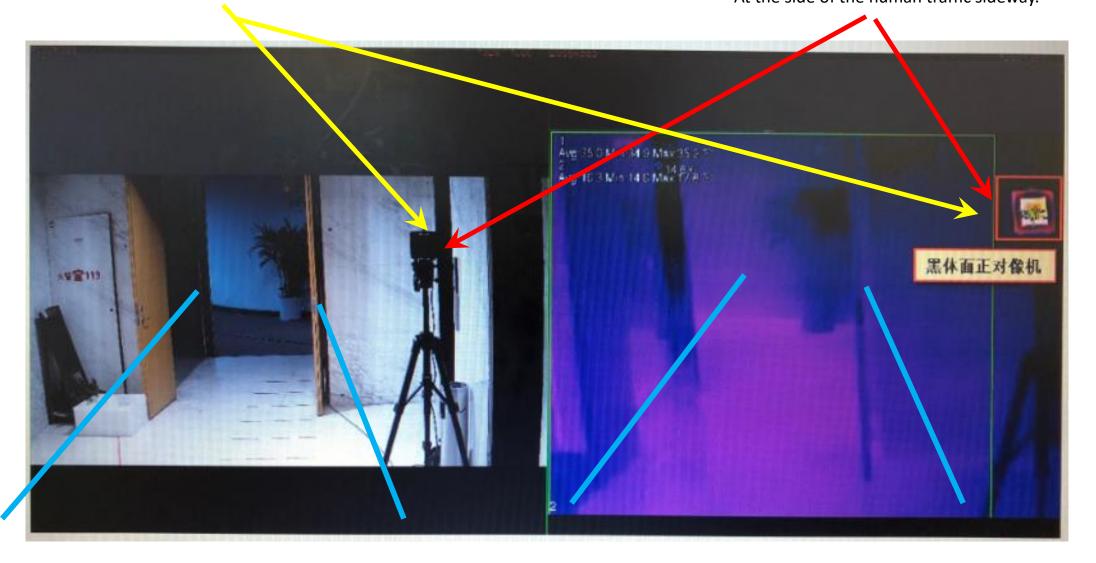

LENS	BLACKBODY DISTANCE	HUMAN HEAD DISTANCE FRM THERMAL CAMERA
3.5mm	2 meter	2 meter
7mm	3 meter	3 meter

REMARKS:

Thermal camera need to deployed higher than the Blackbody, distance between both need to be refer to the thermal camera focal length. Eg, refer to previous table.



REMARKS:

Avoid deployment in dark environment or facing strong backlight, for optimum result.

